



1000+

Partial List)

- | | | | | | |
|--|---|--|--|---|--|
| • Sleeve - Bearing | • Spring - Front | • Switch - Electrical | • Transducer - EGR Back Pressure | • Valve Assembly - Brake | • Wiring Assembly - A/C |
| • Sleeve - Front Stabilizer Bar | • Suspension Tensioner | • Windshield Wiper | • Transducer - Hydraulic Pressure | • Valve Assembly - Brake M/C | • Blower Motor Feed |
| • Sleeve - Rear Stabilizer Bar | • Spring - Gear Tensioner | • Switch - Fuel Filter | • Transducer Assembly | • Valve Assembly - Cooling Control | • Wiring Assembly - Brake Skid |
| • Sleeve - Spacer Snap Ring | • Spring - Leaf Rear | • Switch - Ignition Anti-Theft | • Transfer Case Assembly | • Valve Assembly - Exhaust | • Wiring Assembly - Interior/Engine/Exterior |
| • Sleeve - Transmission Oil Pressure Boost | • Spring - Overrunning Clip | • Switch - Pressure Warning | • Transfer Case Encoder/Shift Motor | • Valve Assembly - Fan | • Wiring Assembly - Radio |
| • Sleeve Assembly - Clutch Ad | • Spring - Parking Pawl | • Switch - Temp Control | • Transmission - Actuator Assembly | • Thermostat Control | • Worm - Parking Brake |
| • Sleeve Assembly - Rear Lube | • Spring - Rear | • Switch - Temp Control Valve | • Transmission - Bearing | • Valve Assembly - Fuel Selector | • Yoke - Driveshaft Center |
| • Sleeve/Ring Assembly Lockout | • Suspension Torsion | • Switch - Turn Indicator | • Transmission - Control Pivot | • Valve Assembly - Fuel Tank Vent | • Yoke - Shaft Support |
| • Slide - Door Window Regulator | • Spring - Reverse Inhibitor | • Switch - Vacuum Pump | • Transmission - Cover | • Valve Assembly - Main Control | • Yoke - Universal |
| • Slide - Front/Rear Seat Track | • Spring - Shift Bias | • Switch and Bracket Assembly - Tailgate | • Transmission - Control | • Valve Assembly - Master Cylinder Control | |
| • Slinger - Front/Rear Hub Oil | • Spring - Tran G/Shift Lever | • Switch Assembly - Brake Warning | • Transmission - Mount | • Valve Assembly - Power Steering Control | |
| • Slip Yoke Assembly - Front Axle | • Spring Assembly - Front | • Switch Assembly - Door Ajar | • Transmission - Oil Cooler Line | • Valve Assembly - Thermal Vent | |
| • Snap Ring - Countershaft | • Spring Assembly - Rear | • Switch Assembly - Door Lock | • Transmission - Oil Pump | • Valve Assembly - Trans Control | |
| • Snap Ring - Synchronizer | • Springs Slipper | • Switch Assembly - Door Warning | • Transmission - Sun Gear | • Valve Assembly - Vacuum Check | |
| • Snap Ring - Transmission | • Sprocket - Crankshaft | • Switch Assembly - EGR | • Transmitter Remote Control | • Valve/Switch Assembly - Brake | |
| • SNS and Transmission Assembly | • Sprocket - Lock Ring | • Switch Assembly - ELEC Shift | • Trip Minder Assembly | • Vane Sensor | |
| • Tire Press | • Start/Stop Push-Button Switch | • Switch Assembly - Fuel Tank | • Tube - Fuel Injection | • Variable Assist Power Steering Module | |
| • Socket - Instrument Panel Light | • Starter Motor Assembly | • Switch Assembly - Gear Shift Neutral | • Tube - Oil Level Indicator | • Variable Cam Timing Assembly | |
| • Socket and Wire - Rear Left | • Starter Motor Solenoid | • Switch Assembly - Lock Sensor | • Tube - Turbo Air Outlet | • Variable Camshaft Timing (VCT) Phasers | |
| • Socket Assembly - Auxiliary Electric Power | • Stationary Elevated Ride Control | • Switch Assembly - Parking Brake | • Tube - Turbo Oil Return | • Vehicle Emergency Messaging Module Assembly | |
| • Solenoid - Engine Timing | • Steering Actuator Valve | • Switch Assembly - Pressure | • Tube - Turbo Oil Supply | • Vent - Rear Axle Housing | |
| • Solenoid - Engine Variable Timing | • Steering Column Lock Actuator | • Switch Assembly - Radio | • Tube Air Suspension | • Venturi A/C Evaporator | |
| • Solenoid - Luggage Door | • Steering Column Lock Assembly | • Switch Assembly - Rear Axle | • Tube Vacuum Heat Valve | • Venturi Assembly A/C | |
| • Solenoid - Press Regulator | • Steering Stop | • Switch Assembly - Speedometer | • Turbo Boost Gauge | • Viscous Coupler/Flexible Coupler | |
| • Solenoid - Regulator | • Steering Wheel Controls | • Switch Assembly - Window Regulator | • Turbo Discharge Pipe Gasket | • Voltage Converter AC to DC | |
| • Solenoid - Transmission Downshift | • Steering Worm Bearing Cup | • Switch Assembly - Window Regulator | • Turbocharger/Supercharger Unit - Factory-Installed | • Washer - Crankshaft Pulley | |
| • Solenoid - Vacuum Modulator | • Stop Assembly Rear Seat Back | • SYNC™ Control | • Two Speed Shaft Repair | • Washer - Front Couplings | |
| • Solenoid and Manifold Actuator | • Striker Rear Seat Latch | • Synchronizer Assembly | • U-bolt - Rear Spring | • Water Bypass Pipe | |
| • Solenoid Assembly | • Strut - Front Suspension Lower | • TCM (Transmission Control Module) | • U-bolt - Universal Joint | • Water Outlet Connection | |
| • Solenoid Assembly - Fuel | • Subwoofer Assembly | • Temperature Indicator | • Underbody Linkages and Couplings | • Water Pump | |
| • Solenoid Assembly - Trans | • Suction/Discharge Assembly | • Tensioner - Timing Chain | • Universal Joint | • Wheel Cylinders | |
| • Sonic Plenum EGR Valve | • Unload Sensor | • Thermistor/Temperature Sensor Probe | • Vacuum Gasket | • Wheel Steering Assembly | |
| • Spacer - Front Spring | • Support - Coupling | • Thermostat Housing | • Vacuum Selector - Air Conditioner | • Window Crank Handle/Knob | |
| • Spacer - Power Steering | • Shaft - Exhaust Pump | • Throttle Valve Cable | • Valve - A/C Comp Low Pressure | • Windshield Wiper Motor | |
| • Spacer - Rear Spring | • Support - Front/Rear Seat Belt Buckle | • Thrust Bearing | • Valve - A/C Compressor Pressure | • Wiper Motor | |
| • Spacer - Rear Spring | • Support - Front/Rear Seat Belt Buckle | • Tie Rods Inner/Outer | • Valve - Anti-Backfire | • Connector Grommet | |
| • Spacer - Transmission | • Support - Rocker Arm | • Timing Chain Tensioner | • Valve - Assembly H/L Cover | • Wire - Power Steering Assist | |
| • Spare Wheel Carrier | • Support - Turbocharger | • Timing Chain Set | • Valve - Brake | • Wire - Speaker System | |
| • Lift Assembly | • Support Arm Assembly | • Torque Arm Assembly | • Pressure Differential | • Wire Assembly - Front/Rear Seat Control | |
| • Speaker - Assembly | • Support Assembly - Drive | • Torque Converter Assembly | • Valve - Brake Pressure Meter | • Wire Assembly - Neutral Switch | |
| • Speaker - Parking Aid Control | • Support Assembly - Trans | • Torque Converter Pressure Valve | • Valve - Brake Sensor | • Wire Assembly - RPM Sensor | |
| • Speedograph/Tachograph | • Switch - A/C Comp Clutch | • Torque Converter Support | • Valve - Covers | • Wire Harness - A/C Fan | |
| • Speedometer Assembly | • Switch - A/C Pressure | • Torsion Bar - Front | • Valve - Door Vent | • Wire Harness - Air Conditioner | |
| • Spindle - Nut and Bearing | • Switch - A/C Temperature Control | • Torsion Spring | • Valve - EGR Vacuum Control | • Wiring - A/C Clutch | |
| • Spindle and Spindle Support Springs | • Switch - Back-Up Light | • TPMS Sensor | • Valve - Fuel Sender Check | • Wiring - A/C Control Switch | |
| • Spindle Assembly | • Switch - Brake Anti-Lock | • Track - Door Center | • Valve - Guide | • Wiring - Engine Loom | |
| • Spindle Nut Assembly | • Switch - Brake Low Pressure | • Track Front/Rear Seat Inner | • Valve - Lube Connector | • Wiring - Exterior | |
| • Spring - Camshaft Plunger | • Switch - Brake Pressure Warning | • Track Front/Rear Seat Strap | • Valve - Main Oil Pressure | • Wiring - Interior | |
| • Spring - Differential Clutch | • Switch - Brake Traction Lock Control | • Trailer Brake Module | • Valve - Throttle Center | • Wiring - Radio Amplifier | |
| • Spring - Door Latch | • Switch - Coolant Temp | • Transceiver - Passive Anti Theft | • Valve - Throttle Pressure | | |
| | | • Transducer - EGR | • Valve - Transmission | | |
| | | | • Valve Assembly - Air Bypass | | |

Ford Protect Maintenance Plans								
Plan	Description	Ford	Competitive-Make	Time/Mileage	Roadside Assistance	Rental	Optional Key Services	Interest-Free Financing
Premium/Extra Maintenance Plan	Covers routine inspections, preventive care, all scheduled maintenance, and replacement of select wear items	✓	✓	Premium Maintenance: plans available up to the earlier of 10 years or up to 175,000 miles. Extra Maintenance: plans available up to the earlier of 8 years or up to 150,000 miles.	■	Optional First-Day Rental	■	✓
Limited Maintenance Plan	Covers oil and filter change, tire rotation, multi-point inspection, (DEF) top-off	✓	✓	A variety of time and mileage options up to the earlier of 6 years or 100,000 miles.	■	■	■	✓
Basic Maintenance Plan	Covers oil and filter change, tire rotation, multi-point inspection	✓	✓	A variety of time and mileage options up to the earlier of 6 years or 100,000 miles.	■	■	■	✓

 | FORD PROTECT

In Florida, Ford Protect is a Service Contract from Ford Motor Service Company (License #42722).

In Texas, Ford Protect is a Service Contract from Ford Motor Service Company (License #SCP-165).

October 202



